PFW 6880

Installation Guide

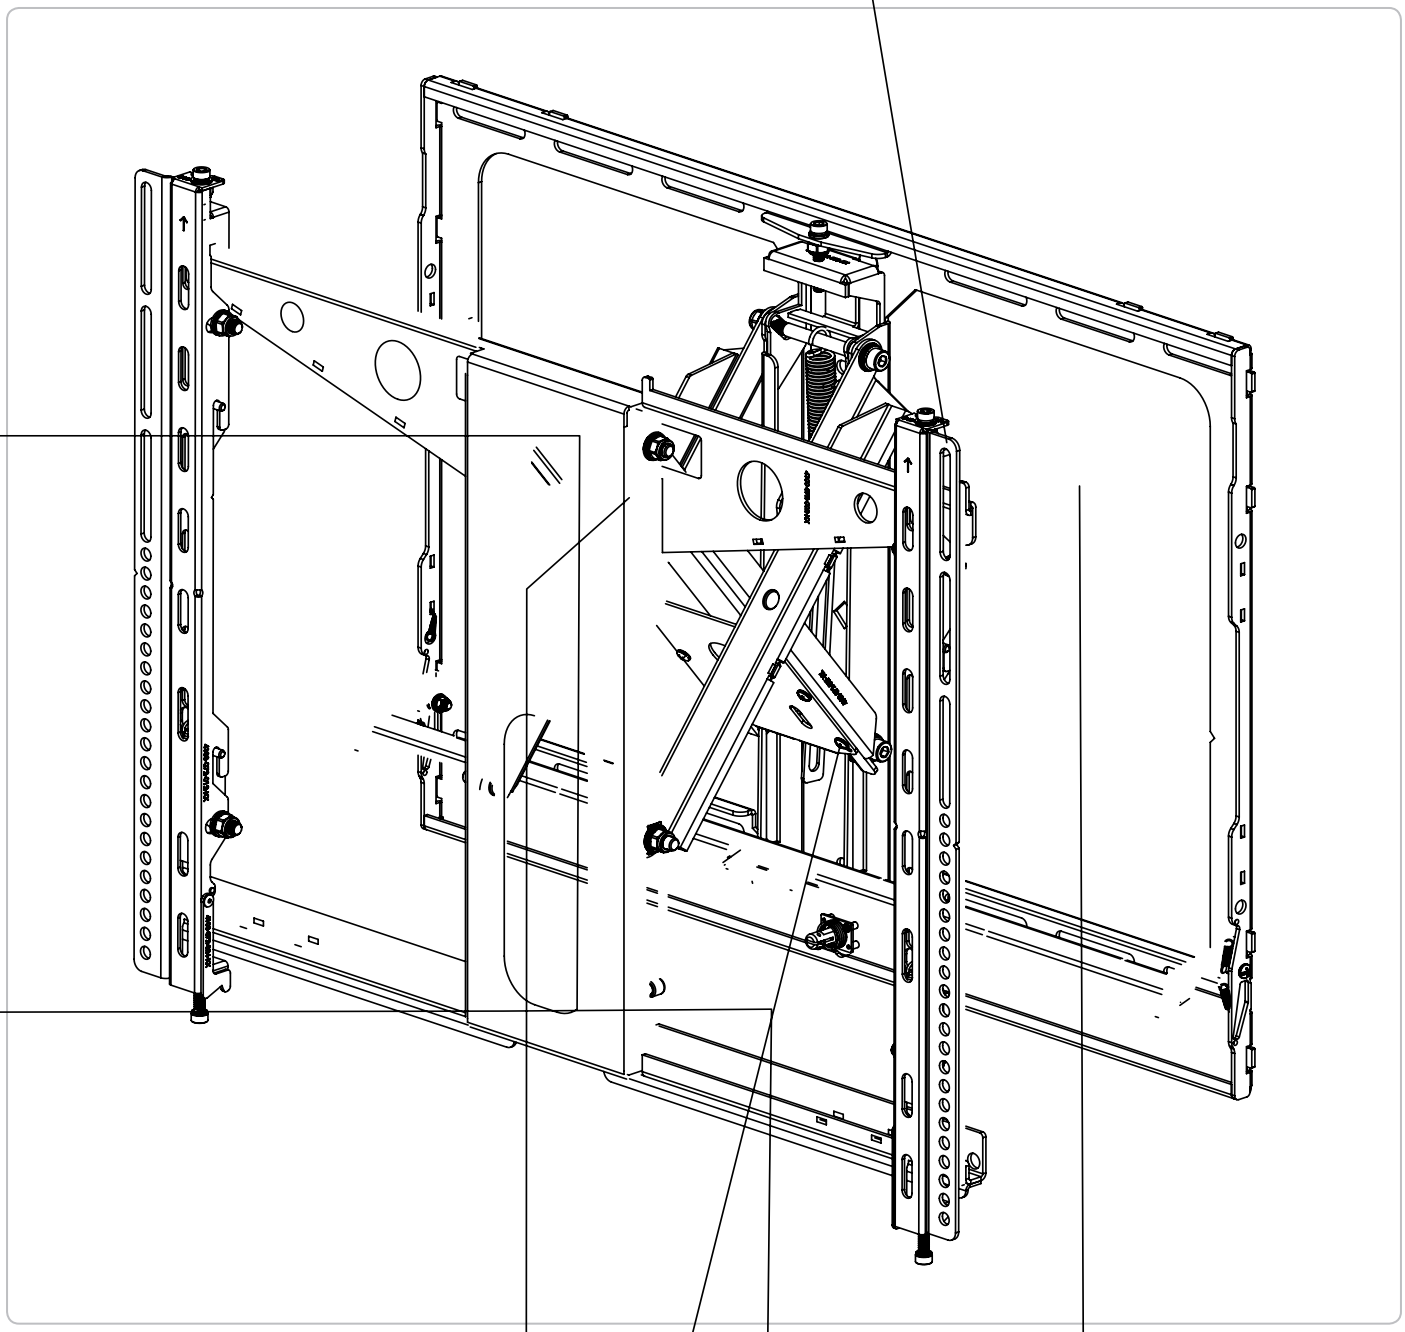

vogel's professional

PFW 6880
Installation Guide

100 lb / 45.35 kg.

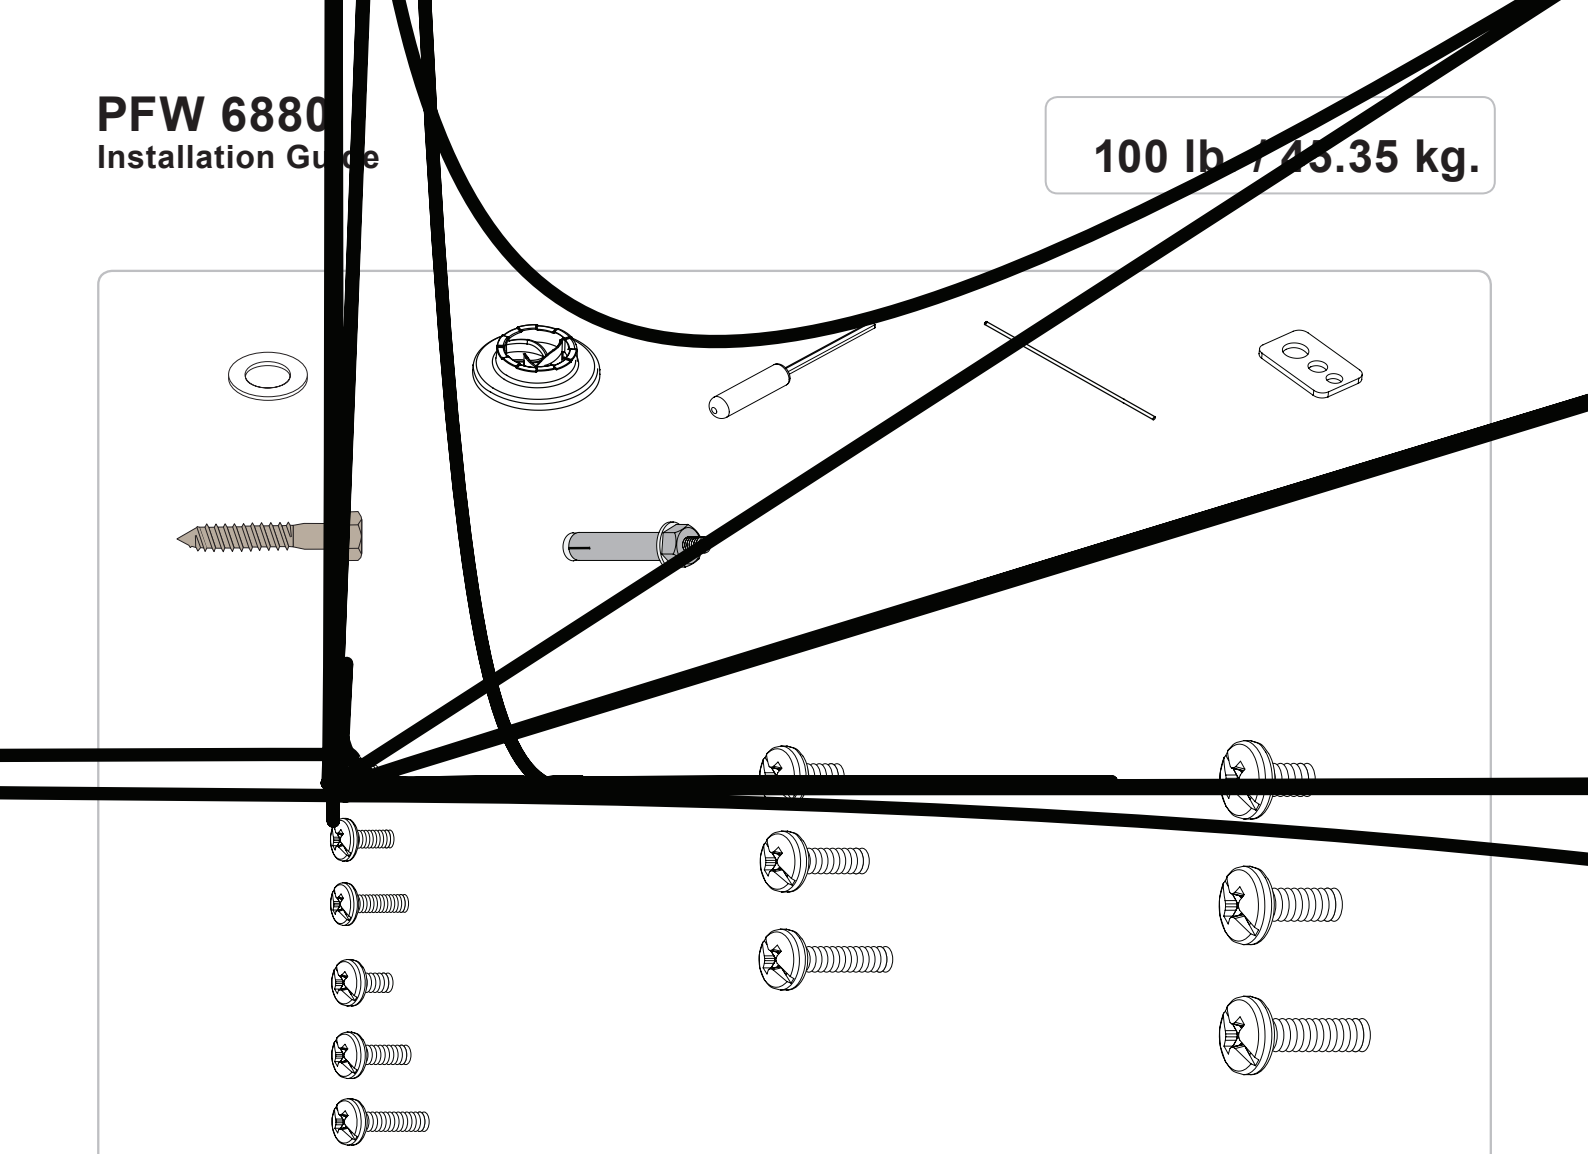

vogel's professional

PFW 6880
Installation Guide

Use a stud fnder to determine the exact center of wall studs in

Use a pencil to mark the exact center of each of the wall studs.

1

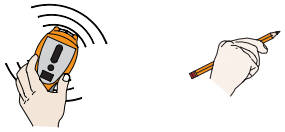

2

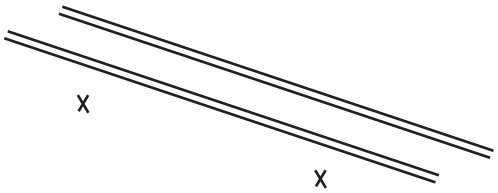

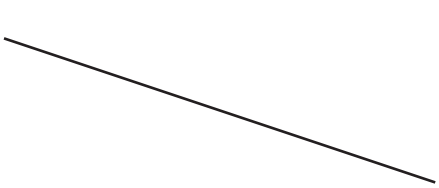



PFW 6880
Installation Guide

5

6

vogel's professional

PFW 6880
Installation Guide

7

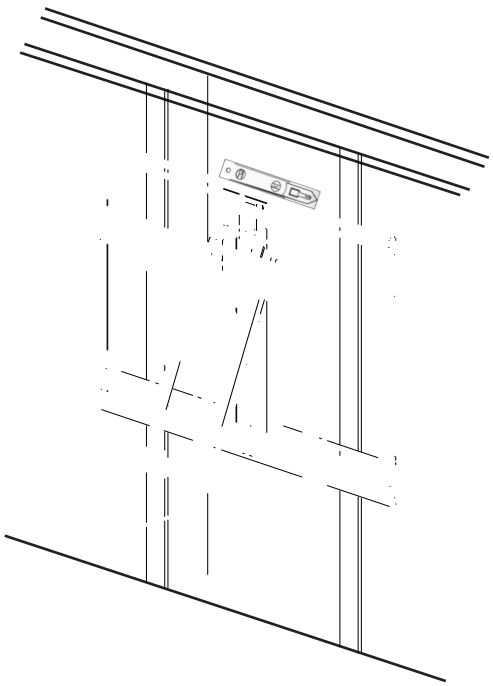

is level, align your spacer to the top left or right (depending on

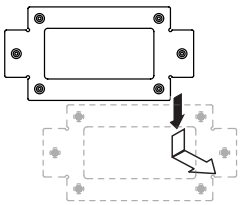

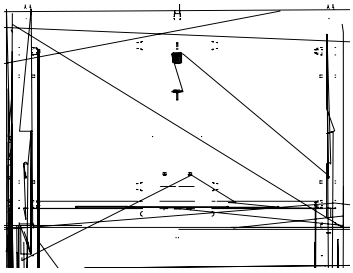

PFW 6880
Installation Guide

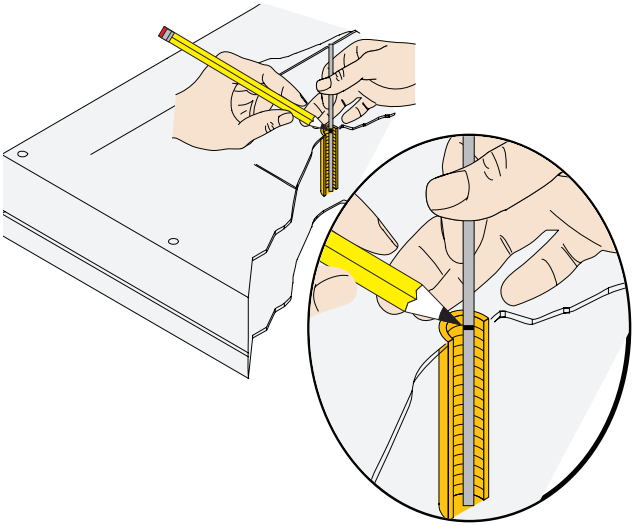

inserts found on the back of the flat-panel.

3) the threaded insert, as shown in Figure 1.

allowance mark on the small straw or toothpick, as shown in Figure 2 and Figure 3, do not use

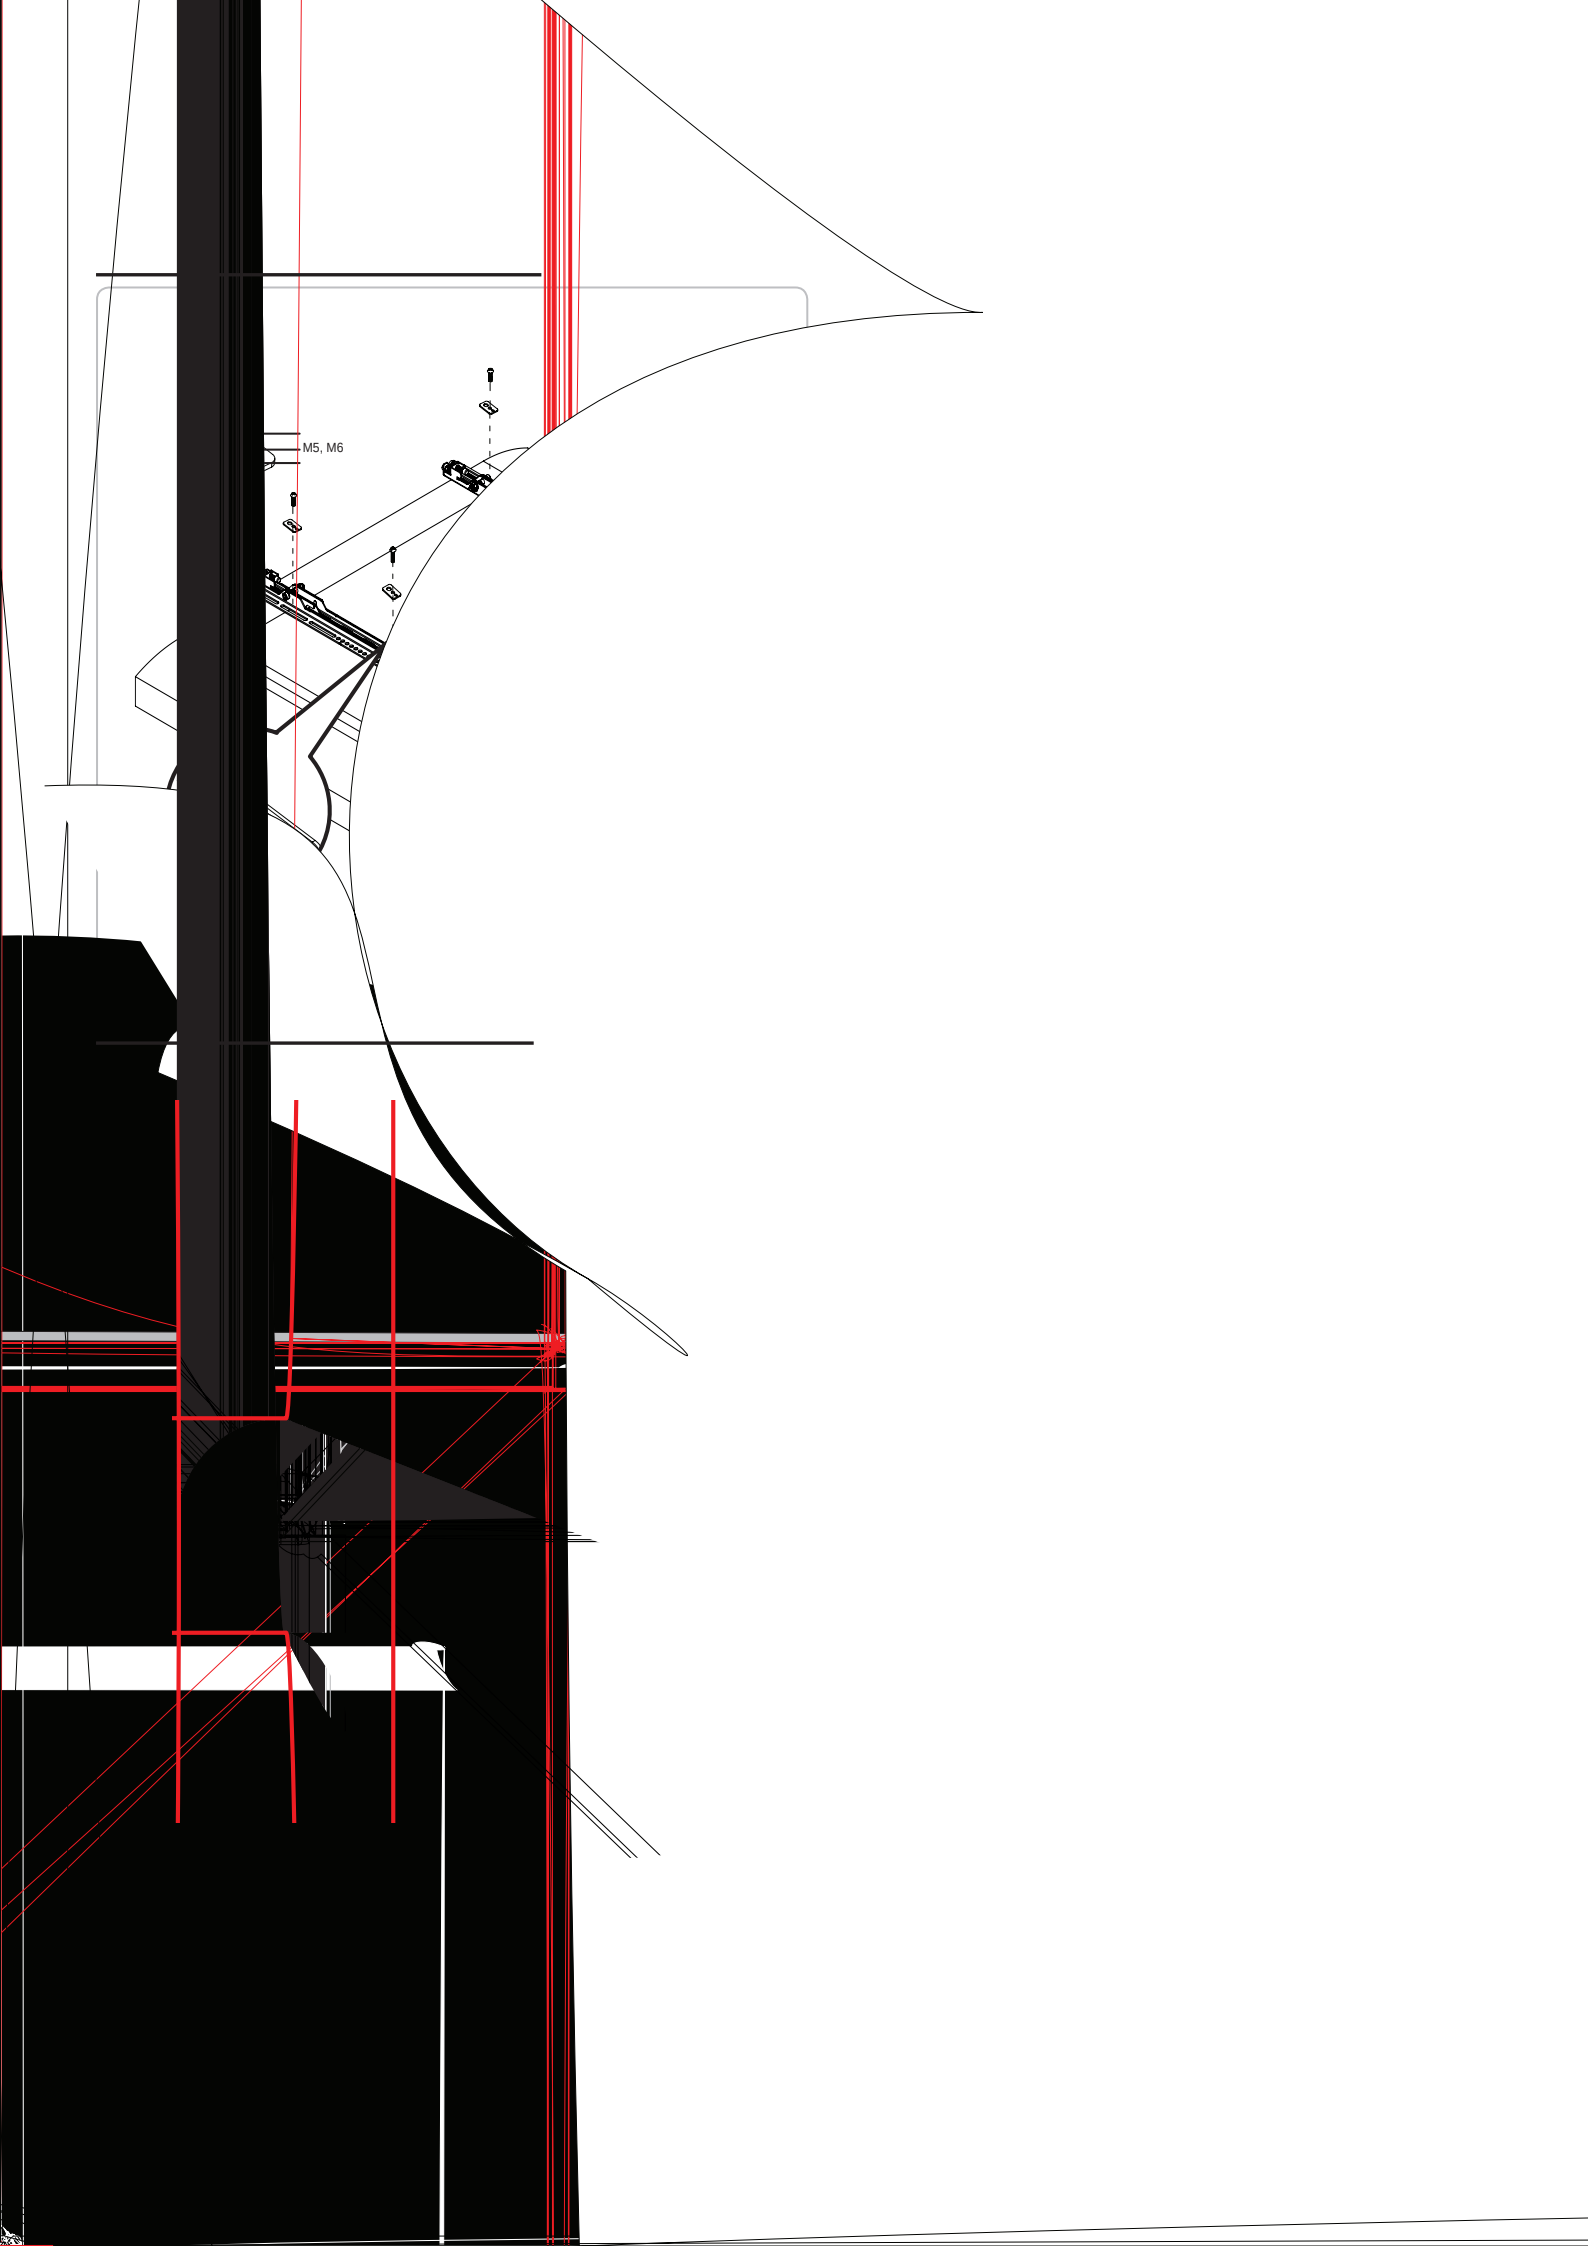
M5, M6

the screws, push the bracket up to
remove slack from the bracket, then tightened the

Mounting bracket adjustments are factory pre-set (see Note

This section requires two people.

Do not release your fat-panel until you are certain that top and

Slide the fat-panel down slowly, keeping it close to the wall.

3)

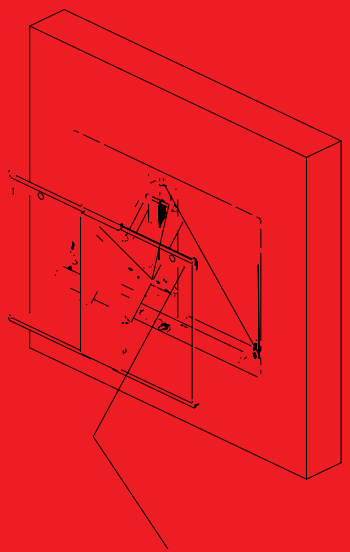

PFW 6880
Installation Guide

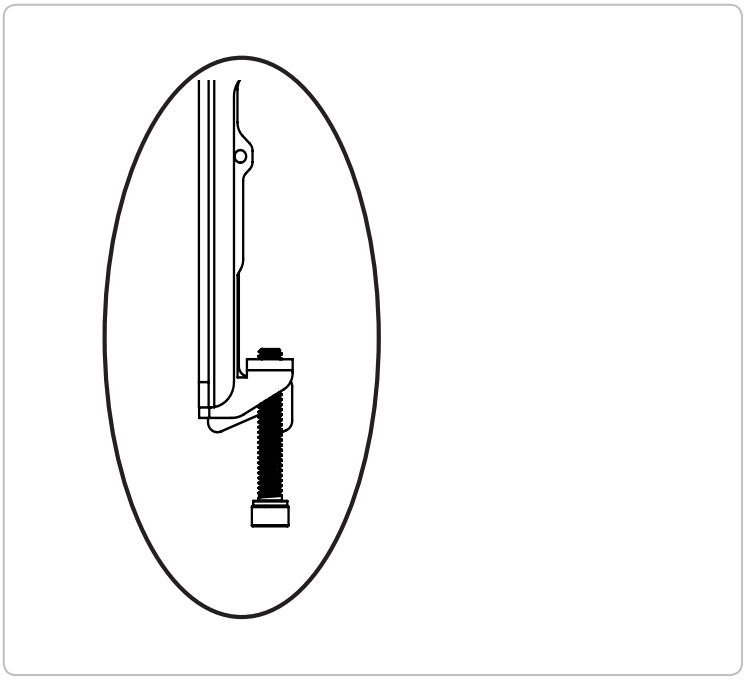

PFW 6880
Installation Guide

Move Inward

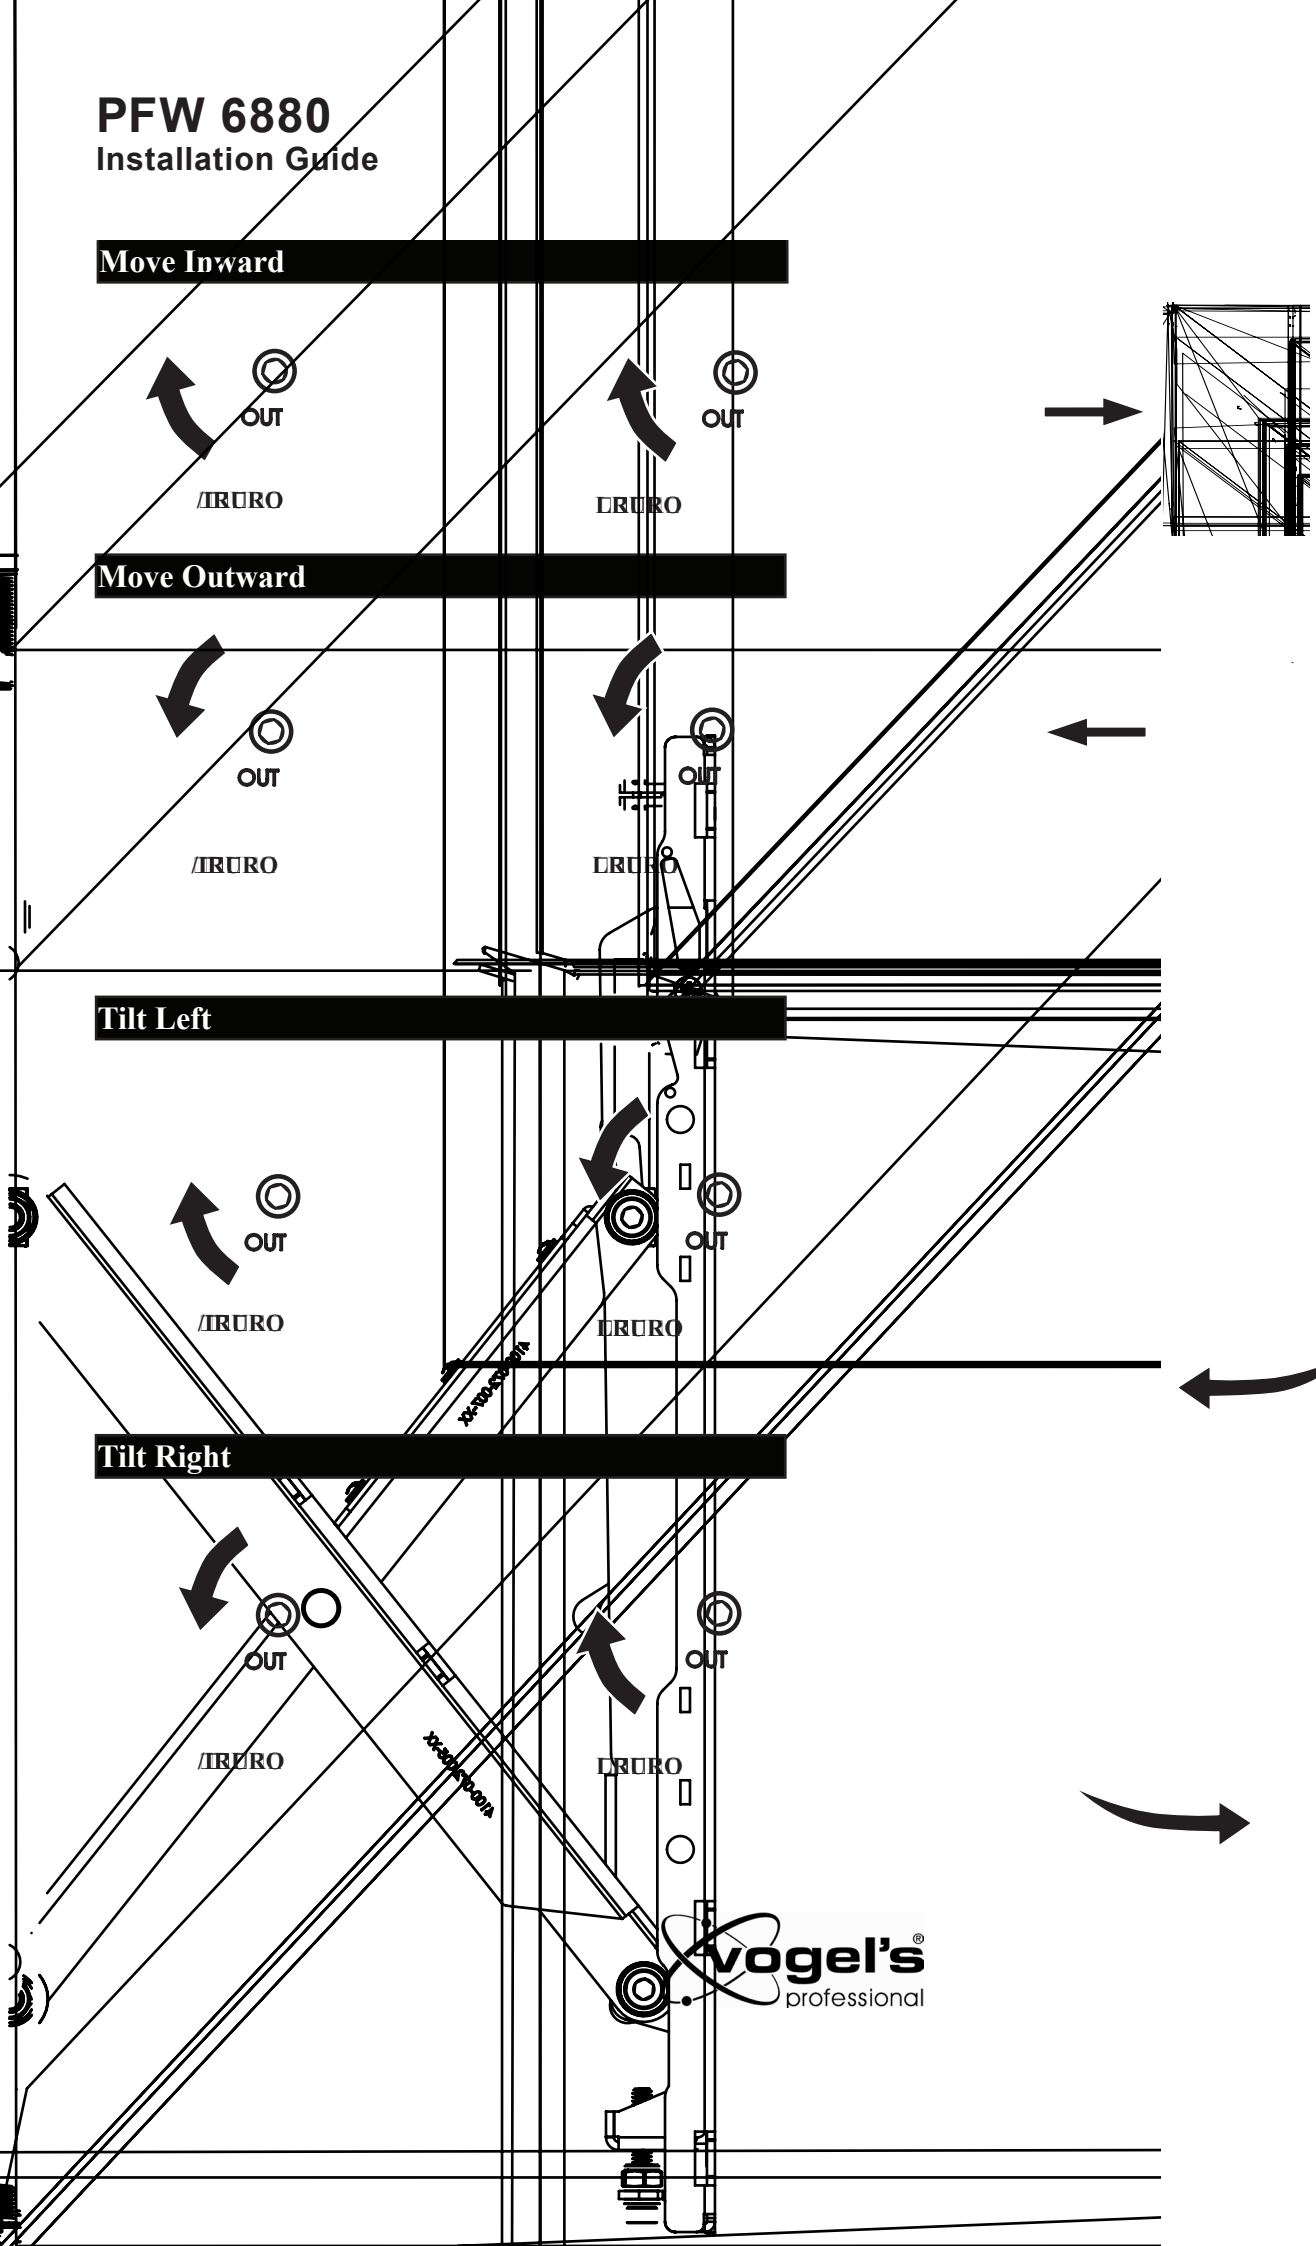

Move Outward

Tilt Left

Tilt Right

vogel's professional

PFW 6880
Installation Guide

Positive / Negative Tilt

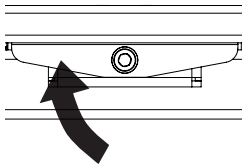

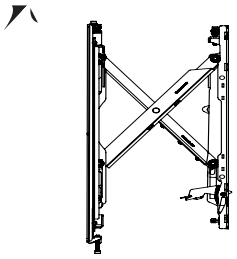

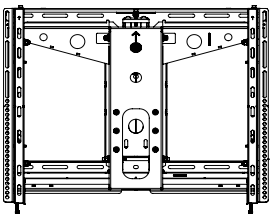

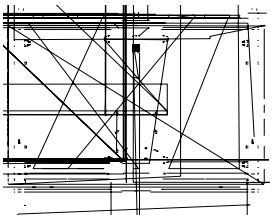

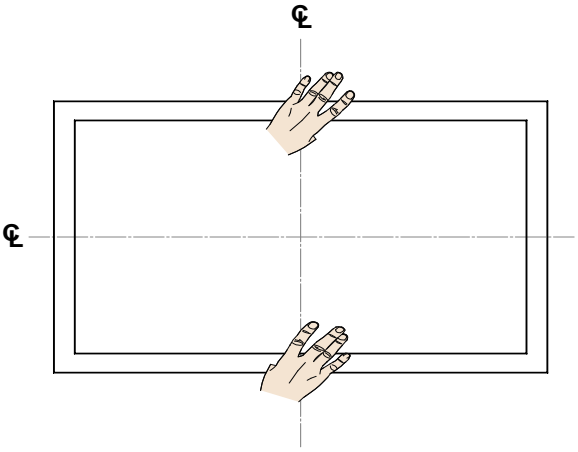

PFW 6880
Installation Guide

Damage happens when weight is transferred to the ultra-thin bezels of

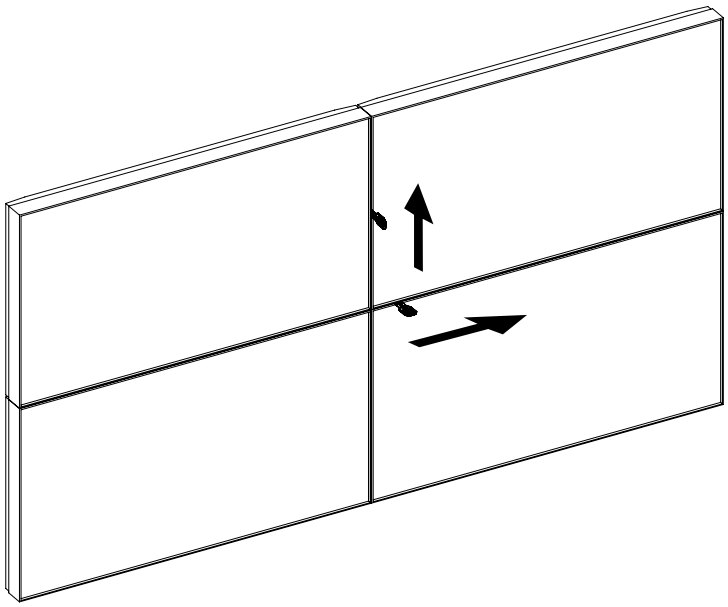

1. Swipe GAPit along vertical gap

3. Swipe GAPit along horizontal gap

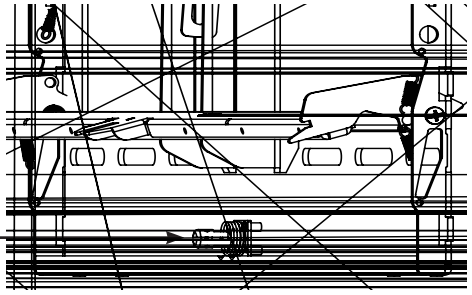
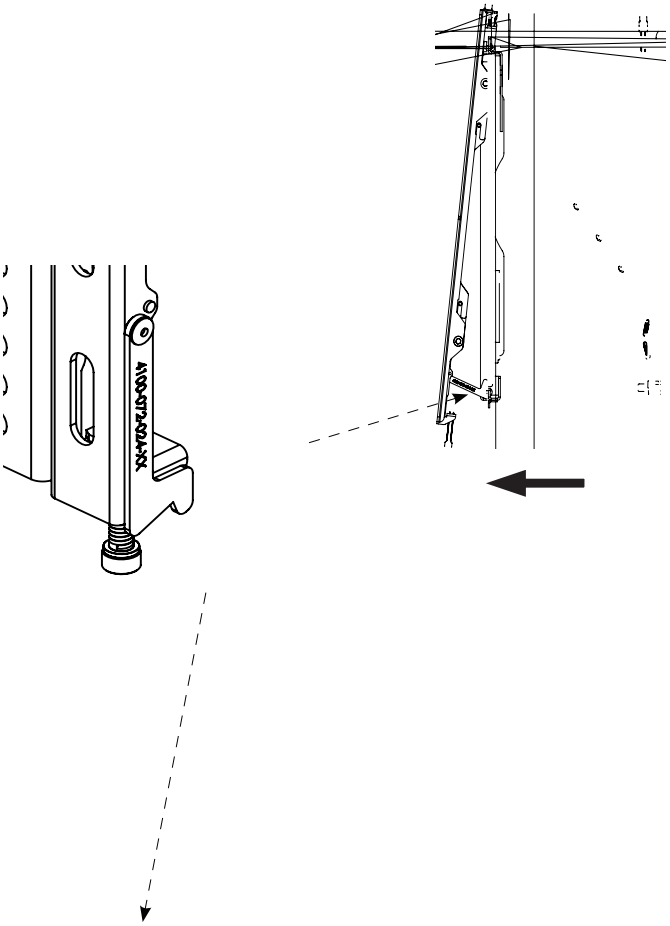
Servicing